

Restore Factory Settings

- 1, Turn throttle lever to max and keep.
- 2, Turn power on.
- 3, Waiting for check light off.
- 4, Turn throttle lever to min.
- 5, Turn power off.

Restore factory settings is also an automatic throttle calibration process.